


- 1) Cut template out
- 2) Place on area of cowling then mark and cut

TEMPLATE

AdvancedAero
• C O M P O N E N T S

NACA Scoop Large
Template for Installation

For further information refer to our website
www.AdvancedAero.com

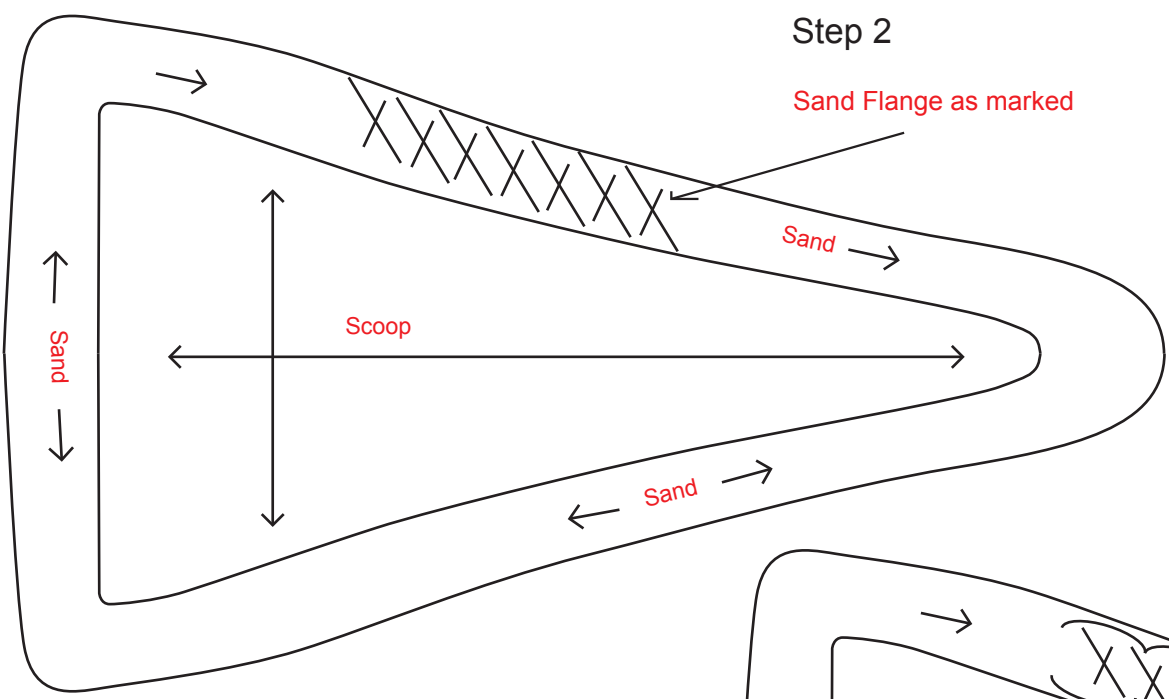

Step 2


Sand Flange as marked

Sand

Scoop

Sand

Sand

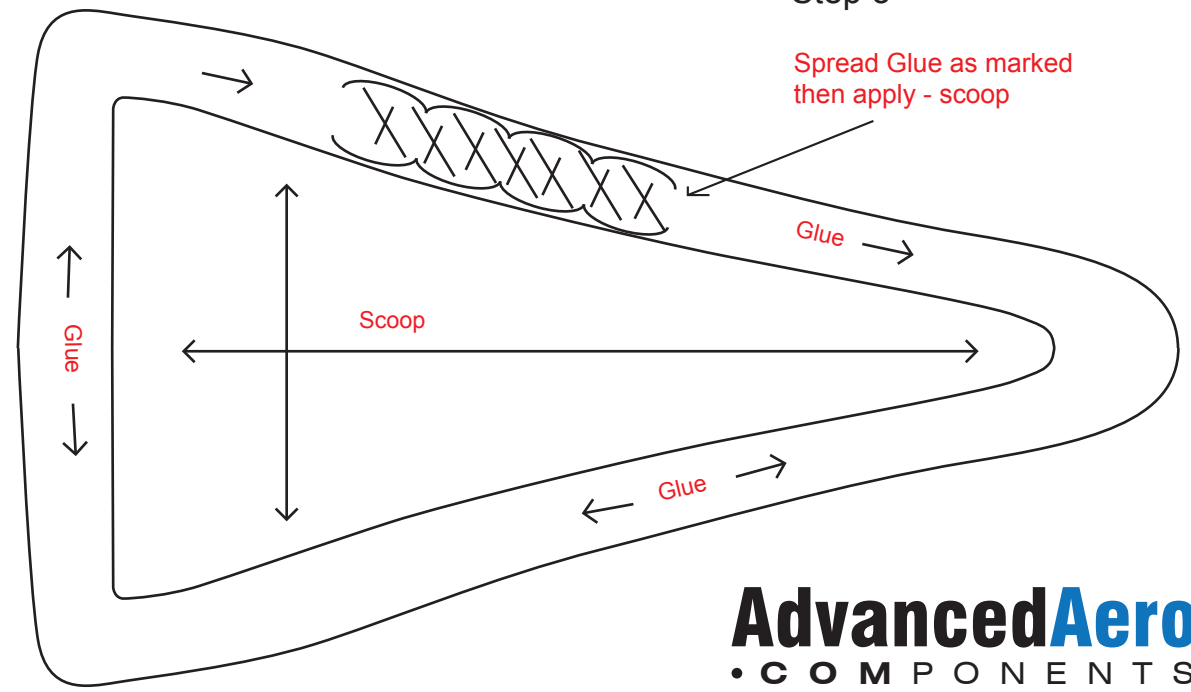

Step 3

Spread Glue as marked then apply - scoop

Glue

Scoop

Glue

Glue

For further information refer to our website
www.AdvancedAero.com

AdvancedAero
• C O M P O N E N T S

NACA Scoop Large
Installation Instructions