


- 1) Cut template out
- 2) Place on area of cowling then mark and cut

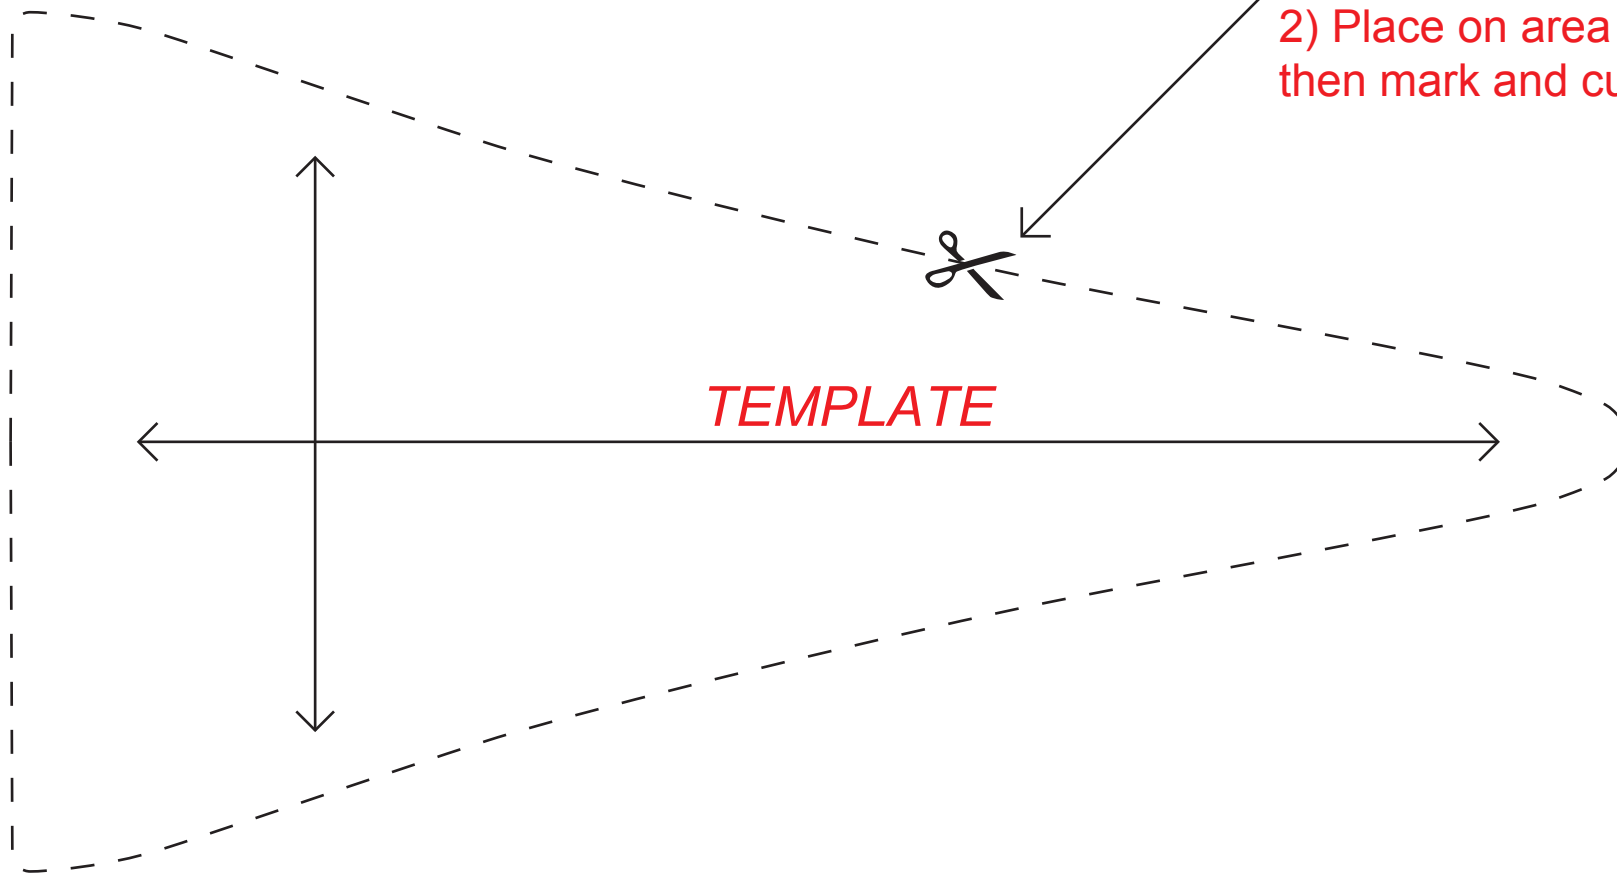


AdvancedAero
• C O M P O N E N T S

NACA Scoop Large
Template for Installation


Step 2

Sand Flange as marked

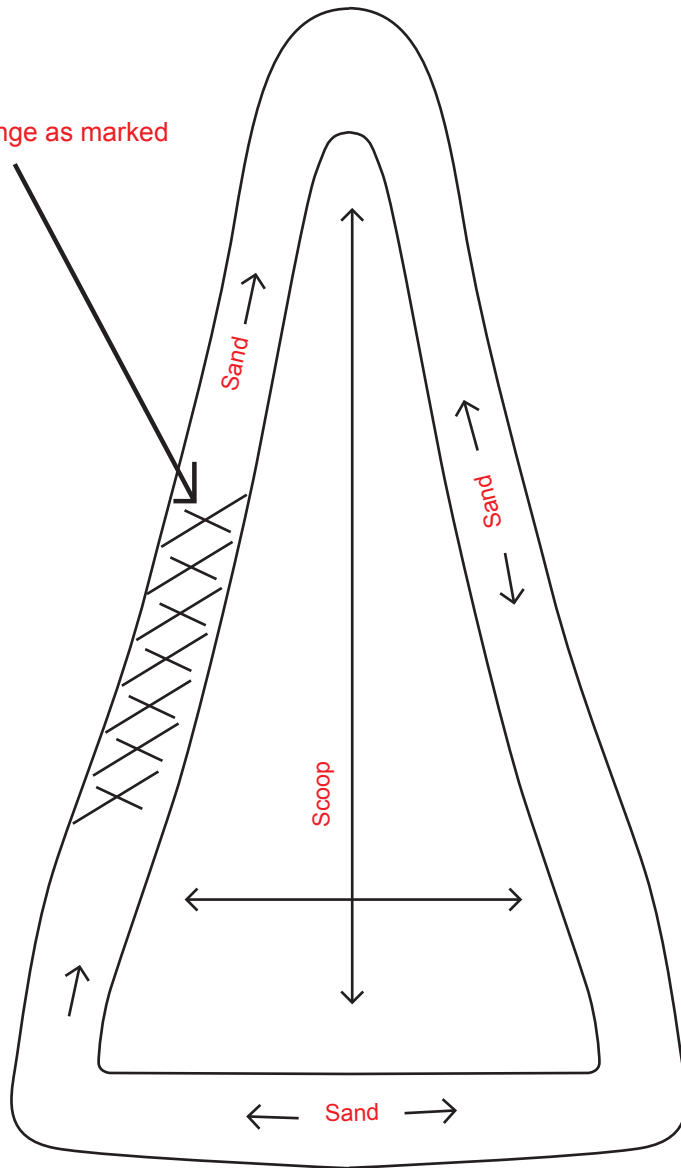

Step 3

Spread Glue as marked then apply - scoop

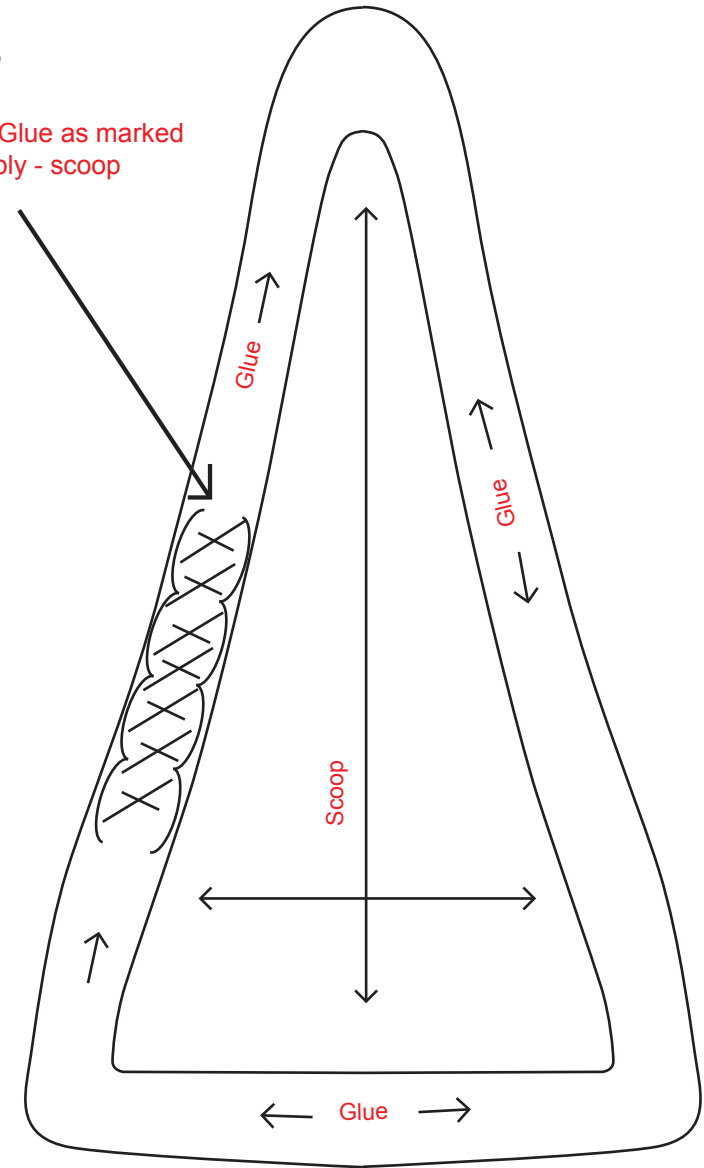

For further information refer to our website
www.AdvancedAero.com

AdvancedAero
• C O M P O N E N T S

NACA Scoop Large
Installation Instructions