

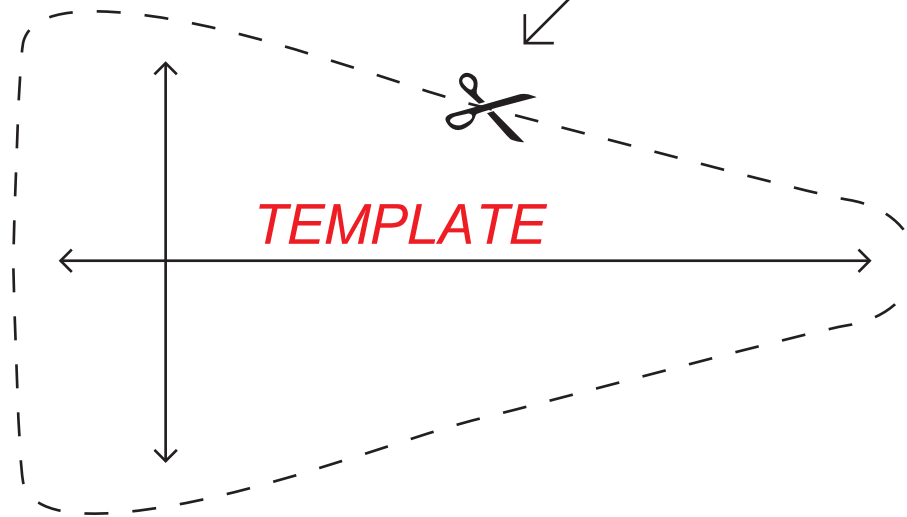


- 1) Cut template out
- 2) Place on panel and mark
- 3) Cut hole in panel

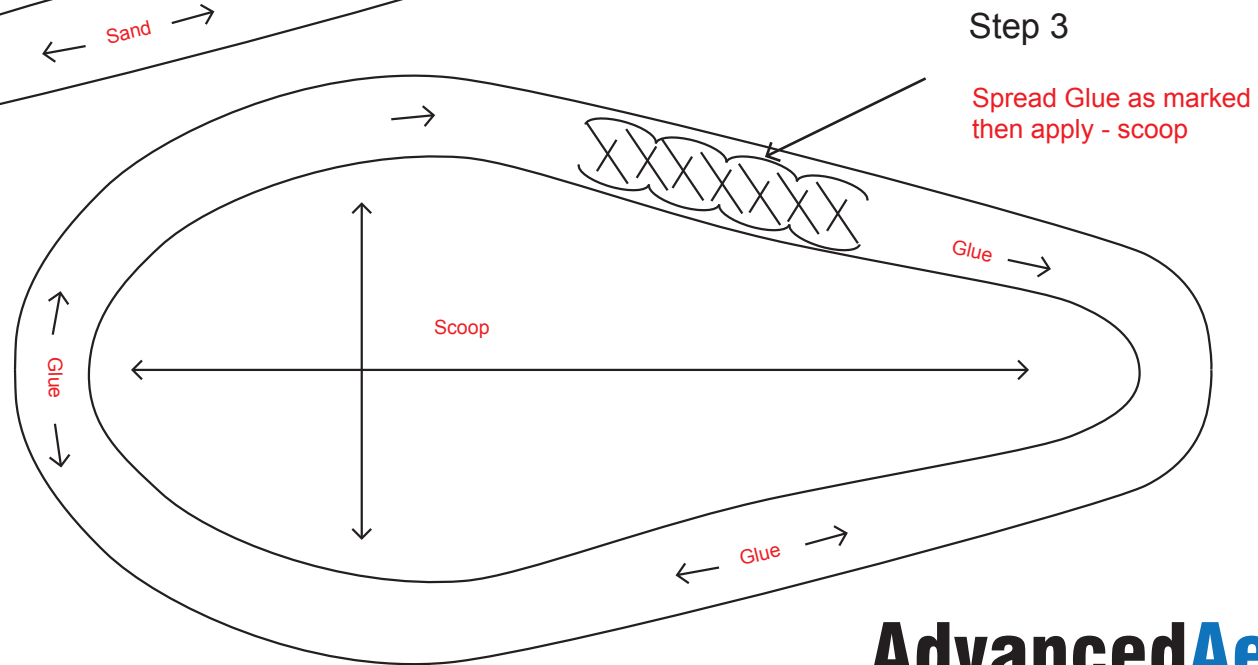

AdvancedAero
• C O M P O N E N T S

NACA Scoop Small
Template for Installation

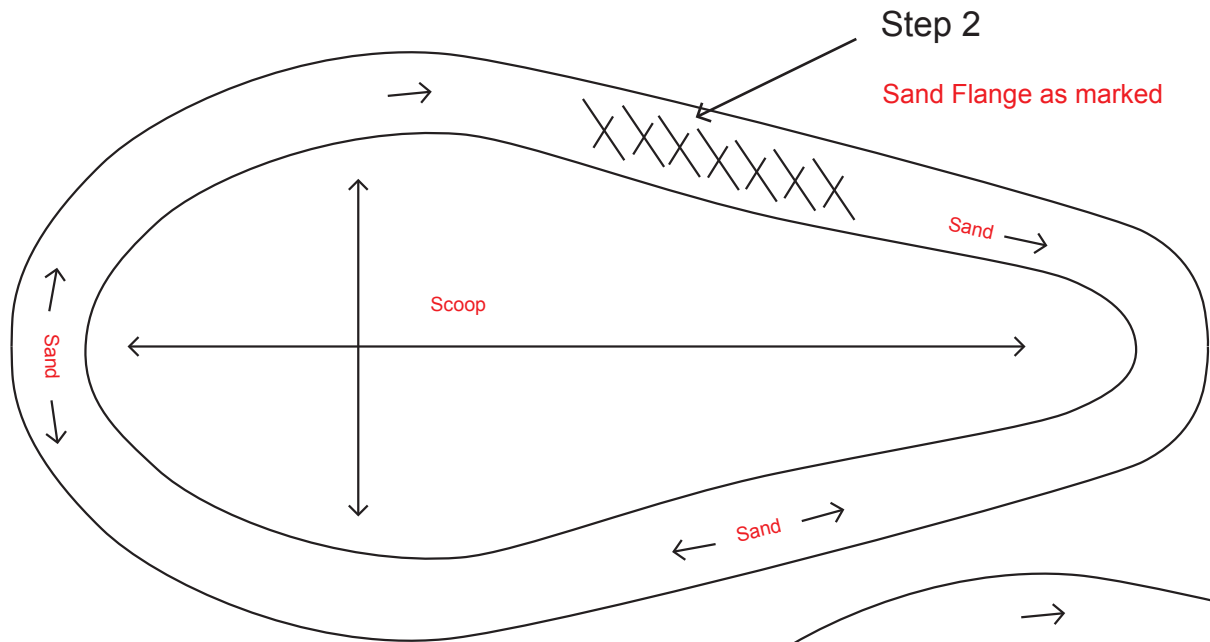

AdvancedAero
• C O M P O N E N T S

NACA Scoop Small
Installation Instructions

For further information refer to our website
www.AdvancedAero.com