

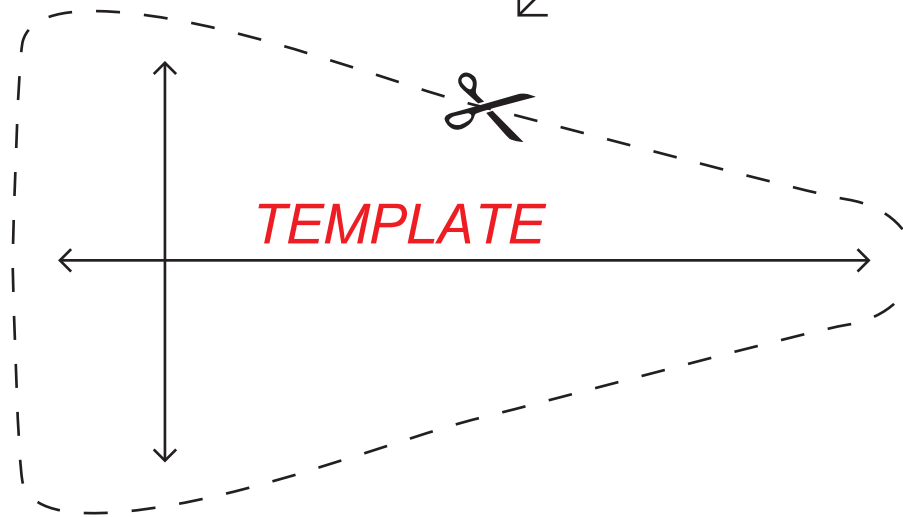


- 1) Cut template out
- 2) Place on panel and mark
- 3) Cut hole in panel

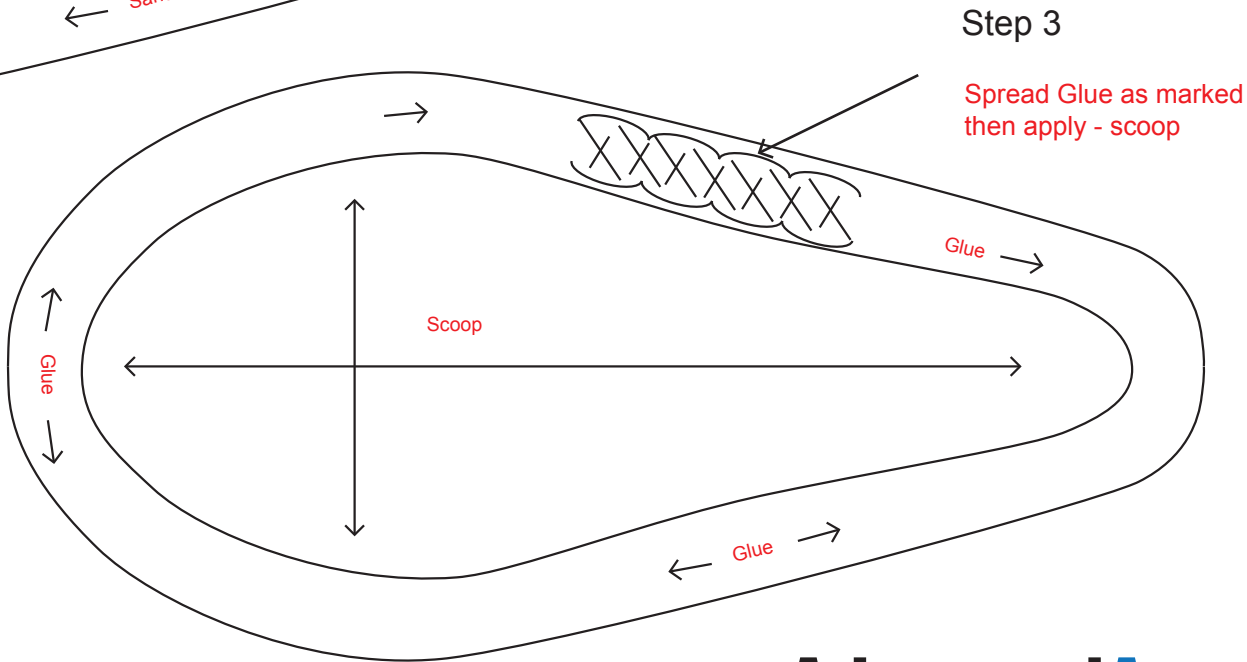

**AdvancedAero**  
• C O M P O N E N T S

NACA Scoop Small  
Template for Installation

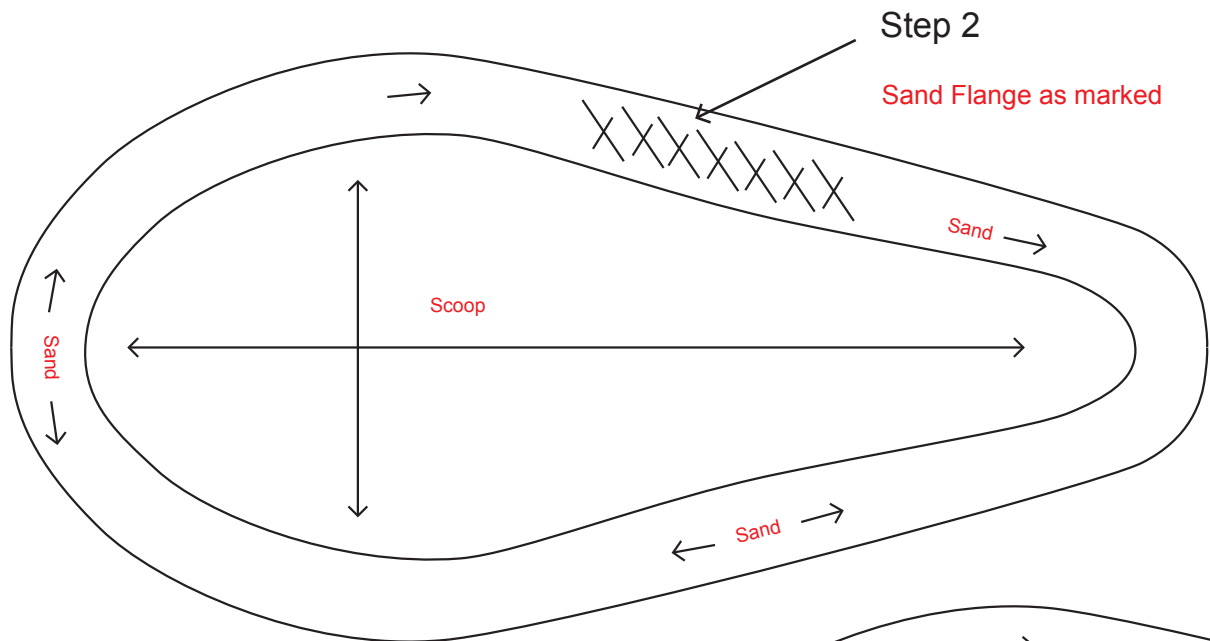

For further information refer to our website  
[www.AdvancedAero.com](http://www.AdvancedAero.com)

**AdvancedAero**  
 • C O M P O N E N T S

NACA Scoop Small  
 Installation Instructions